

# EMBODY™ ARM PAD ASSEMBLY REPLACEMENT


## PARTS INCLUDED:



Right Arm Pad



Left Arm Pad

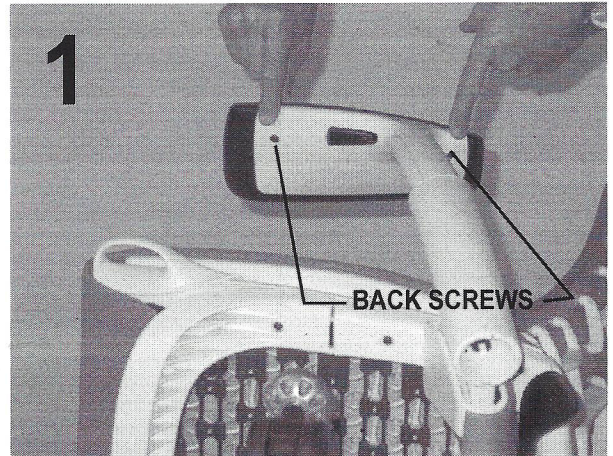


1. Remove front and back screws.

## TOOLS REQUIRED:



T-20 Torx Driver

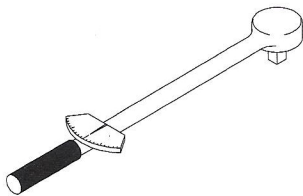

Torque wrench with in-lbs indicator



2. Replace with new arm pad.

3. Re-install screws. Do not overtighten.  
Torc specs 15 in/lbs.

4. Repeat process for other arm pad.

1B4YJ2 REV A