

CAPER™ CHAIR - ARM/ARM PLUG REPLACEMENT

TOOLS REQUIRED: SMALL STRAIGHT HEAD SCREWDRIVER

PROCEDURE:

ARM REMOVAL:

LOCATE SPRING TAB ENGAGED IN BACK FRAME POST. USING SMALL STRAIGHT HEAD SCREWDRIVER, DEPRESS SPRING TAB ON END OF ARM. PULL ARM OUT OF BACK FRAME POST AND DISPOSE OF ARM PROPERLY. SEE FIGURE 1.

ARM PLUG REMOVAL:

LOCATE SPRING TAB ENGAGED IN BACK FRAME POST. USING SMALL STRAIGHT HEAD SCREWDRIVER SET AT AN UPWARD ANGLE, DEPRESS AND PUSH UP ON SPRING TAB TO LIFT ARM PLUG ENOUGH TO BE GRASPED FROM TOP. REMOVE ARM PLUG AND DISPOSE OF PROPERLY. FIGURES 1 AND 2.

ARM/ARM PLUG INSTALLATION:

INSERT REPLACEMENT ARM OR ARM PLUG INTO BACK FRAME POST WITH SPRING TAB ORIENTED TOWARDS CENTER OF CHAIR. SLIDE ARM OR ARM PLUG DOWN UNTIL SPRING TAB PROTRUDES FROM OPENING IN BACK FRAME POST. SEE FIGURES 1 AND 2.

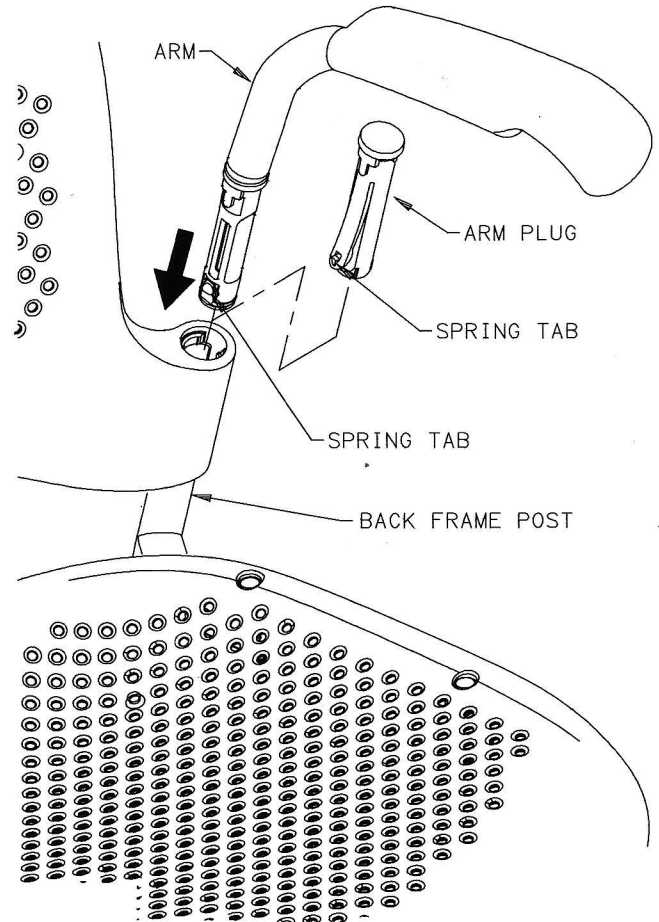


FIGURE 2

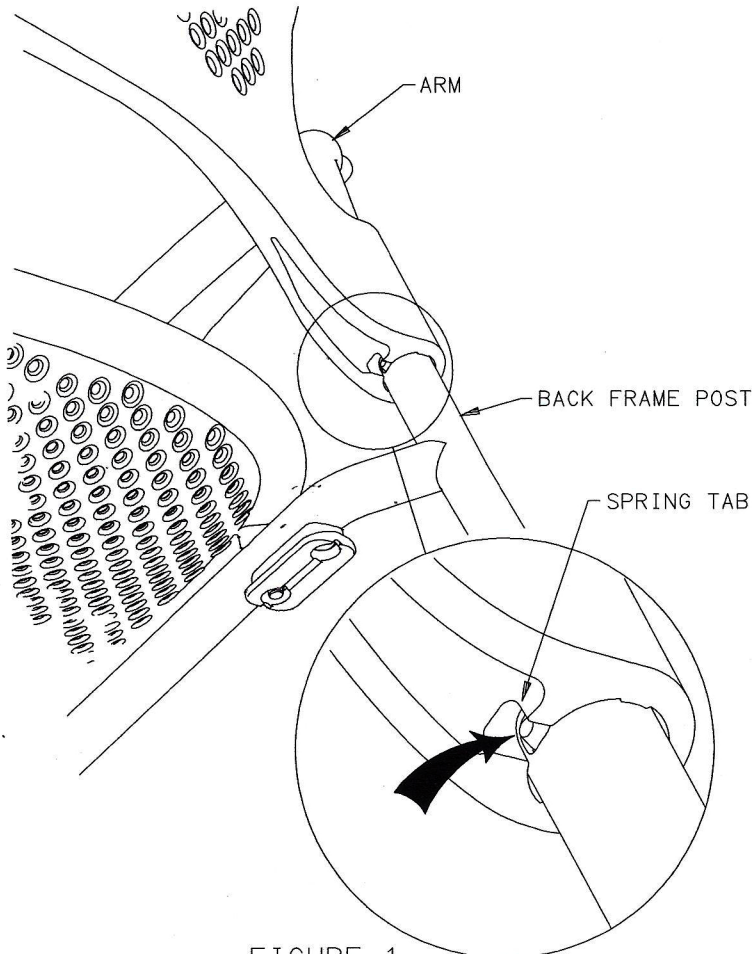


FIGURE 1

(CHAIR VIEWED FROM UNDERSIDE)